

INVISI-FAST™

HIDDEN DECK FASTENER


INSTALLATION

PLUS™ INSTALLATION



Step 1: Starting from the outside, attach the Invisi-Fast™ with no spacer between each joist. *Install first board with proper overhang and secure using the top holes (Deck Board Holes) of the Invisi-Fast™ fastener.

*For a more sound deck and to prevent squeaks, we recommend applying a 3/8" bead of Silicone or Construction Adhesive along joist before installing Invisi-Fast™ hidden deck fastener to help fill in voids and imperfections on the mating surfaces between the joist and deck boards. Not applying adhesive will not compromise stability.

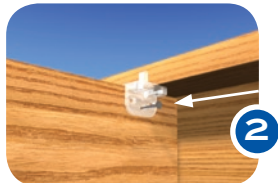


Step 2: Using the Invisi-Fast™ with spacer, slide the convenient Overhang Tabs under your first deck board for hands free attachment. Then, using an approved deck screw, fasten the Invisi-Fast™ to the joist using a lower hole. We recommend one screw to be fastened into the joist. The other 2 holes are to be used as backups (if wood imperfection is present.)



Step 3: Secure the deck board by using the corresponding upper hole.

Note: When 2 boards meet each other on a joist, install an Invisi-Fast™ on each side of the joist.

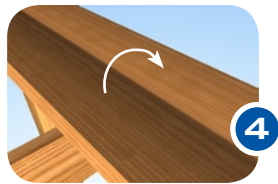

Step 4: Lay the next board in place to assure proper orientation. Simply flip the deck board (top surface facing down) onto the previous deck board. Visually align the board making sure it is flush with the previous board.



Step 5: Place the Invisi-Fast Plus™ fastener onto the deckboard, between the joists. Align the fastener with the edge of the board using the alignment mark (labeled EDGE on the Plus fastener) and fasten using the 2 screw holes with screws provided.

Note: Make sure the EDGE alignment mark faces down when you fasten to deck board.

Note: When two deck boards meet, make sure the Invisi-Fast Plus™ fastener is installed near the Invisi-Fast™ with spacer.

Tip: It may be helpful to use your finger as a guide when aligning the Invisi-Fast Plus™ fastener to deck board.



Step 6: Flip the board over, making sure the board is flat on the joist and tight up against the Invisi-Fast™ with spacer. Repeat steps 2 through 6 and continue for the length of the deck.

Note: Prior to securing the final board, cut your board to size if necessary. Using the Invisi-Fast™ without a spacer, secure the Invisi-Fast™ to the inside perimeter board (rimboard) using the lower hole. Then once all perimeter fasteners are secure, fasten your final deck board using the upper deck board holes.

Please be sure to check with your deck board manufacturer for proper deck board spacing when using the Invisi-Fast™ Hidden Deck Fastening System. Use necessary safety precautions when installing Invisi-Fast™ Hidden Deck Fasteners.
Patent Pending



www.invisifast.com
1-866-766-9427

WARRANTY

The following warranty is made in lieu of all other warranties expressed or implied. Any goods proven to be defective due to materials will be replaced, or purchase price refunded. Under no circumstances shall the manufacturer be responsible for damages in excess of the purchase price. User shall determine the suitability of the product for its intended use and assumes all risks of its use or handling. There are no warranties on screws or tools sold or recommended. Please contact M.M. Products for shipping information. M.M. Products, Inc. is not responsible for damages caused by excessive shrinking or expanding of treated lumber due to moisture.

For more information, visit www.invisifast.com or call 1.866.766.9427